
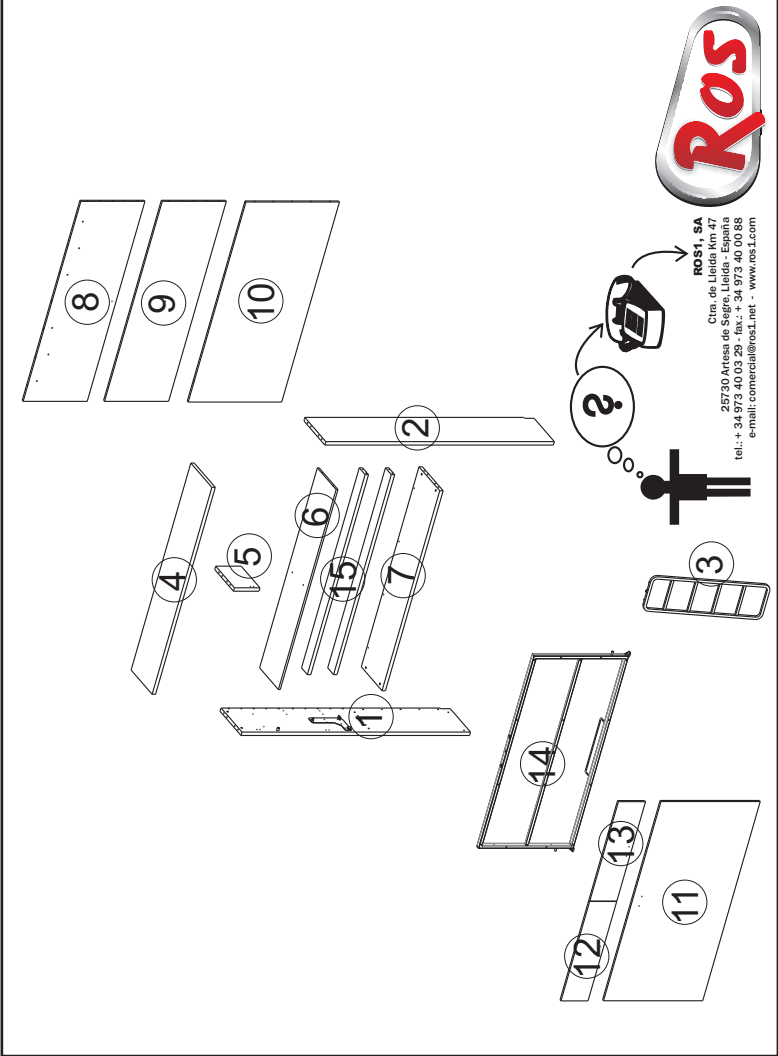
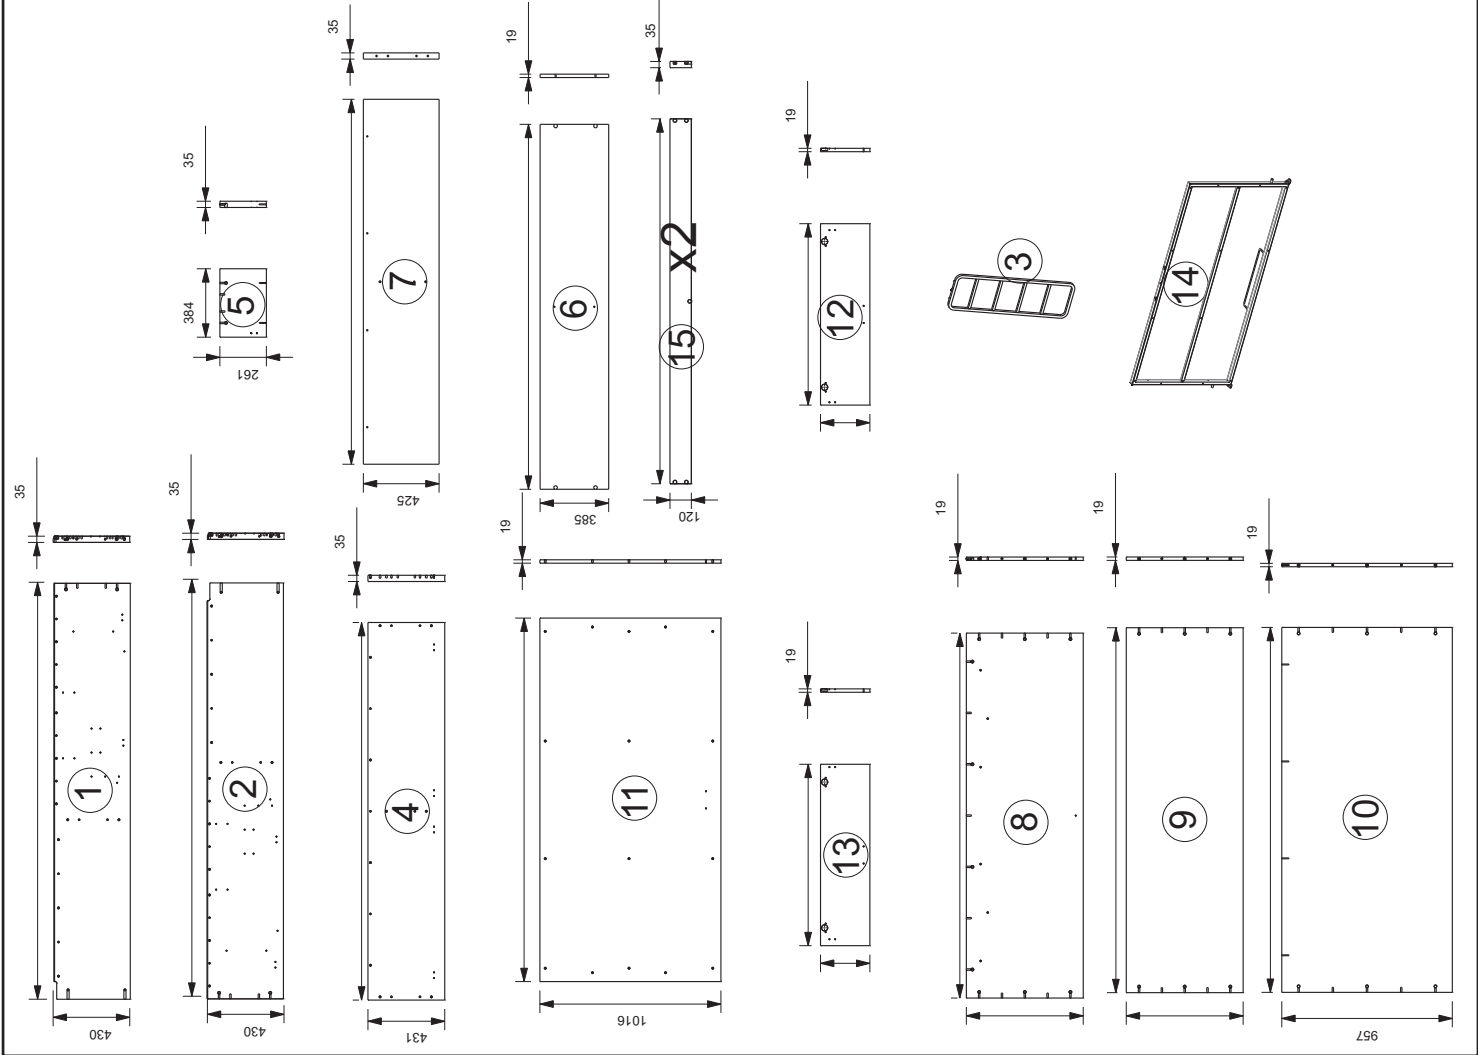



Ref:

7628AM/M/BM  
 L7628AM/M/BM  
 7721AM/M/BM  
 L7721AM/M/BM

P-506-V1

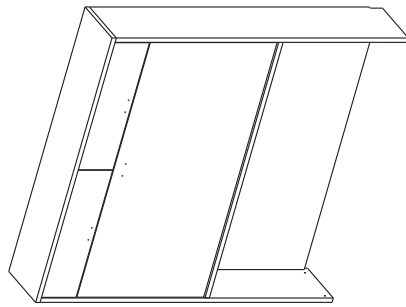


**ROS1, SA**  
 Ctra. de Lliella Km 47  
 08730 Lliella del Riu, Llorens de la Selva  
 08170 Llorens de la Selva, España  
 Tel.: + 34 972 03 929  
 e-mail: comercial@ros1.net - www.ros1.com

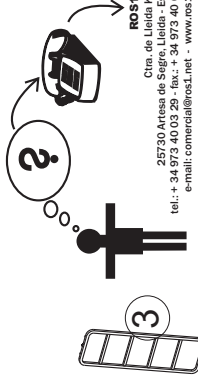


**ASSEMBLY TIME**




**3**

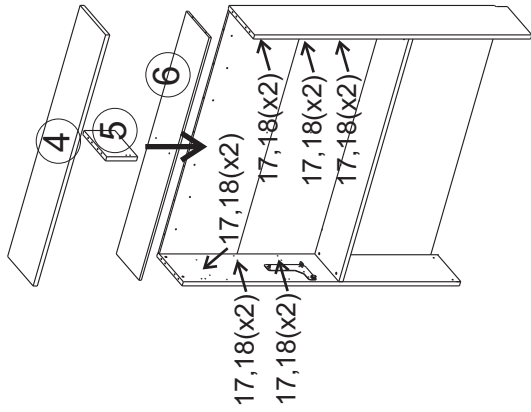

6-071012	7-079107	11-071014	17-071314	18-072310	32-072210
x6	x10	x4	x14	x14	x2

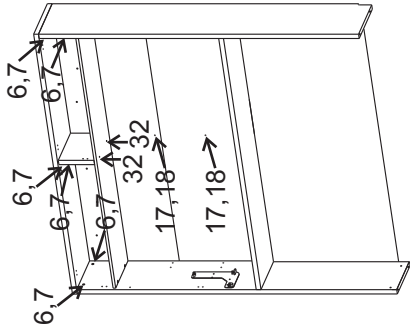


6,7	6,7	6,7	6,7	6,7	6,7
17,18	17,18	32,32	17,18	17,18	17,18

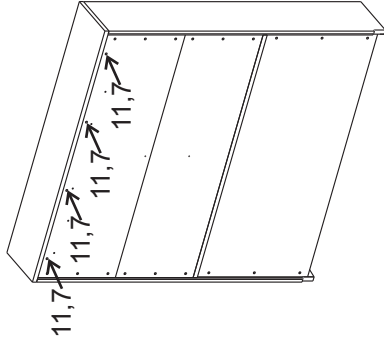


17,18(x2)	17,18(x2)	17,18(x2)	17,18(x2)	17,18(x2)	17,18(x2)
x6	x10	x4	x14	x14	x2

**4** Before fastening to wall use the hardware n°3 to secure perfect leveling.

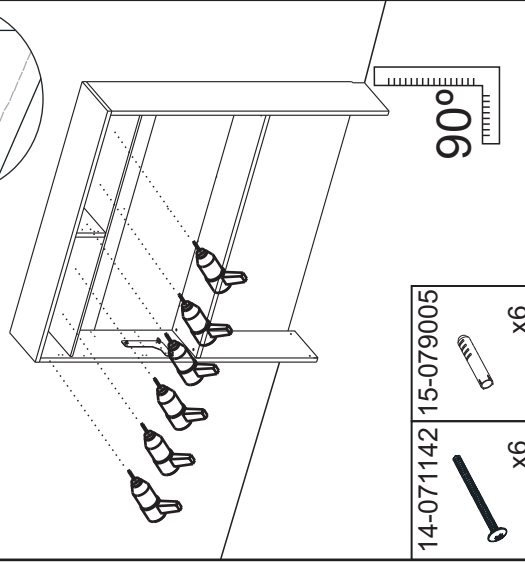


14-071142	15-079005
x6	x6

**5**

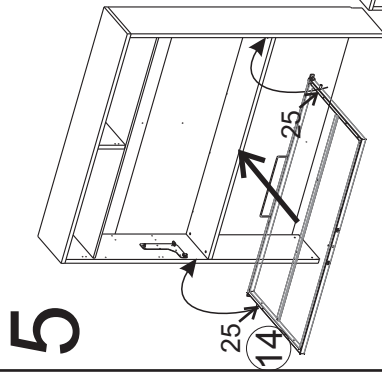


25-
x4

**6**

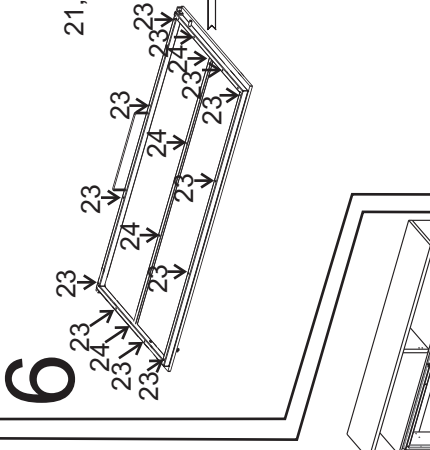


21-079101	22-072456	27-
x2	x2	x4
23-071115	24-071141	19-079087
x12	x4	x2
20-072453		
x4	x4	x4

**7**

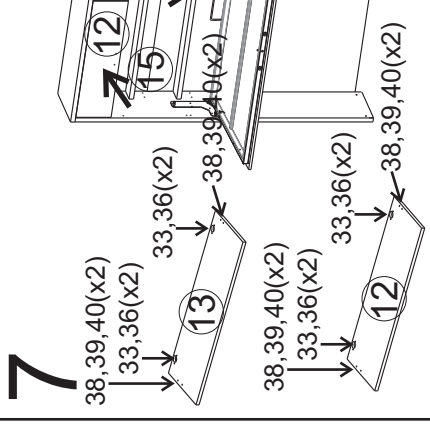

**¡ATENCIÓN!  
¡PELIGRO DE CAIDA  
DE MUEBLE!**

**WARNING!  
RISK OF FALL!**

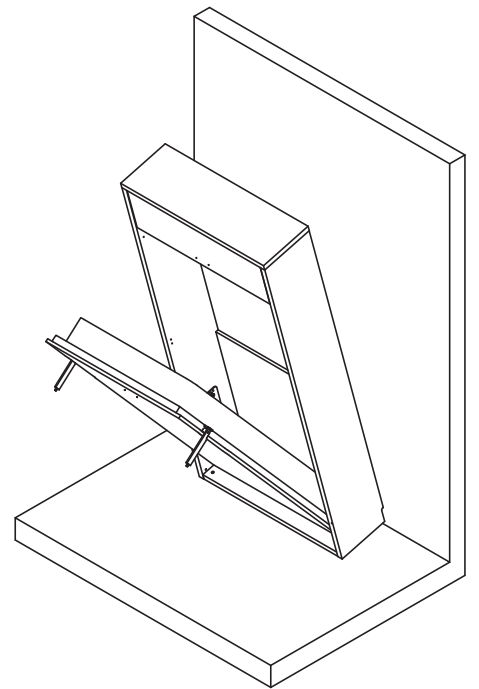

**IMPRESINDIBLE FIJAR  
PRIMERO LA ESTRUCTURA A  
LA PARED ANTES DE MONTAR  
LA CAMA**

**(NO APTO PARA PAREDES PLADUR O  
CARTON-YESO)**

**AT FIRST YOU HAVE TO  
ATTACH THE STRUCTURE ON  
THE WALL BEFORE SETTING  
UP THE BED**

**(PLASTERBOARD WALLS ARE FORBIDDEN)**

